



PresenterCard Quick Start Guide

Button	Action
	Start/Stop Button: Open and close polling.
	Back Button: Go backward through a presentation slide deck.
	Forward Button: Advance through a presentation slide deck.
	Programmable Button* 1: TurningPoint (Default) - Repoll current slide TurningPoint AnyWhere (Default) – Show/Hide Chart Window
	Programmable Button* 2: (Default) Toggle Countdown Timer
	Programmable Button* 3: (Default) Show/Hide Response Grid
	Show/Hide Button: Show/Hide Presentation
	Places PresenterCard in Channel Programming mode.

*To configure PresenterCard programmable buttons, go to the polling software's Setting/Preferences. Full user guide is available at www.TurningTechnologies.com/Support/

Changing PresenterCard Channel

- 1) Press the button.
- 2) Press the or button to increase or decrease channel numbers.
- 3) Once the desired channel is shown on the display, press the button to set the channel.

Configure PresenterCard for TurningPoint

- 1) From the TurningPoint toolbar, click **Tools** and select **Settings**.
- 2) Select **Response Devices** from the Settings pane on the left.
- 3) Scroll down to **PresenterCard**.
- 4) To the right of PresenterCard Device ID, double click **[None]**.
- 5) Press any key on the PresenterCard.
- 6) Click **Pair** on the PresenterCard Pairing window.
- 7) Click Done.

Configure PresenterCard for TurningPoint AnyWhere

- 1) Click Settings (PC) or Preferences (Mac) from the Launchpad.
- 2) Select **Response Devices** from the Settings pane on the left.
- 3) Scroll down to **PresenterCard**.
- 4) To the right of PresenterCard Device ID, click **Change**.
- 5) Press any key on the PresenterCard.
- 6) Click **Pair** on the PresenterCard Pairing window.



www.TurningTechnologies.com
Toll-Free: 866-746-3015