


Programming the ResponseCard® XL

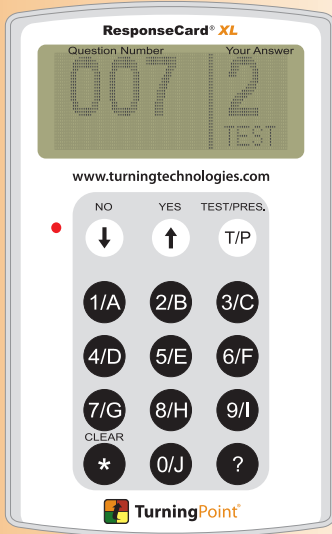

Set ResponseCard® to its Fixed ID:

1. Press and hold the “*” and “1” buttons simultaneously for 3 seconds. LED will turn solid red to indicate the process was performed correctly.
2. Let go of both buttons and the LED will flash 3 times, and the display will read “Init ID Default” to indicate that the ResponseCard was successfully programmed with its fixed ID (serial number on the back of the keypad).